


## How to Install Your New Door Seals

- Examine periphery of existing seal. Locate trim pieces which need removed to access seal.
- Pull existing seal from center to release seal from door aperture edge.

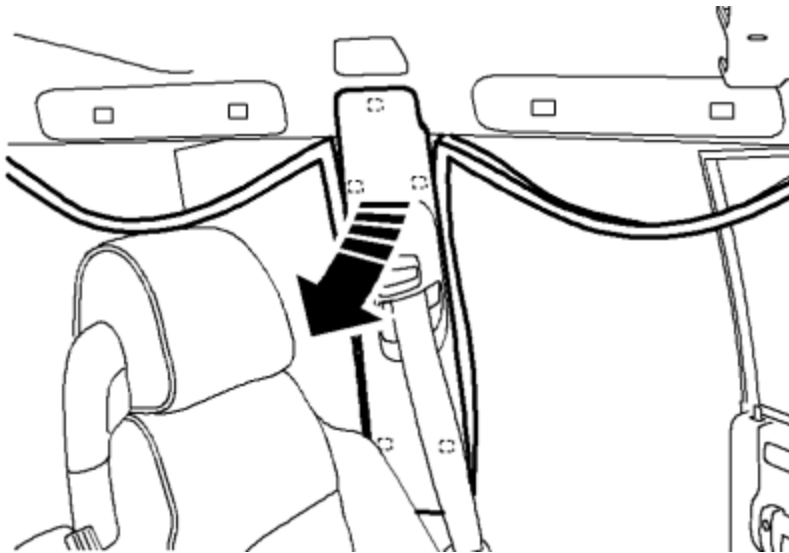

- Examine exposed aperture edge. Address any dirt, corrosion, or damage before installing new seal.
- Examine door to body alignment. If the door is not properly aligned, this may cause over-compression of the new seal, or leave excessive gaps. Address any door alignment issues before moving on.
- Carefully remove new seal from package. If a sharp object is used to open the bag, avoid mistakenly cutting the new seal.
- Locate corners of seal with upper corners of door aperture. With two hands, gently press each corner in to place.
- Using your hands or rubber mallet, move along the remaining unseated portions, gently pressing or tapping the seal over the aperture edge. Ensure seal is fully seating along entire aperture.
- Slowly close the door while watching for even seal compression. It is normal for the door to require significantly more effort to close. This is due to the extended design of the seal and new seals requiring a break-in period of several weeks.
- Reinstall any trim pieces previously removed.